

ASSA ABLOY


ED6600 Series Mortise Crossbar Exit Device

IMPORTANT: WHEN USING SECTIONAL TRIM, SEE SHEET PACKED WITH TRIM FOR ASSEMBLY


HELPFUL HINT: When using door silencers or weather stripping, compensation must be made to ensure proper latch and strike engagement.

BEFORE PROCEEDING WITH STEP 1:


- A. Determine function of device.
- B. Determine hand of door. Check hand of device and reverse if necessary.
- C. Undog cases using key furnished.
- D. Remove tenons from levers using dogging key. Remove case covers.
- E. If this device is for a pair of doors, and the other door uses a vertical rod device, install the vertical rod device first.

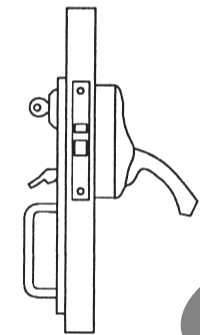


CYLINDER,
HANDLE,
THUMBPIECE

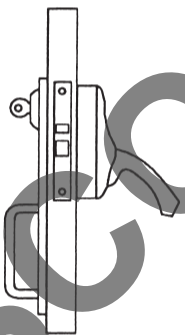


CYLINDER,
HANDLE, NO
THUMBPIECE

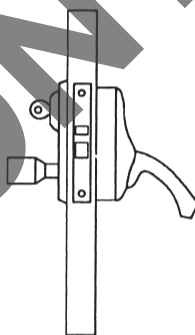

CYLINDER,
KNOB OR
LEVER

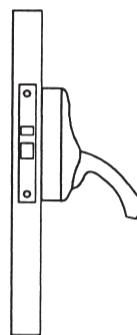

NO TRIM

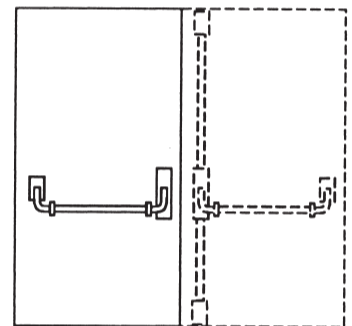

DOUBLE DOORS IN COMBINATION
WITH VERTICAL ROD ON
INACTIVE DOOR

FUNCTIONS

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

08/2018

Installation Instructions


ED6600 Series
Mortise Crossbar Exit Device

1. MARK INSIDE OF DOOR

Detach device template from mortise template. Using Easy Spot Template Locator, mark two (2) locator points on INSIDE and OUTSIDE of door, approximately 36" and 48" above finished floor line. Draw a vertical line through these points on each side of door. THESE LINES ARE THE BACKSET LINES.


A. When installed on an active leaf of pair of doors in combination with vertical rod device, install vertical rod device first.

Draw a horizontal line from top of vertical rod active case onto active door. This is the CASE TOP REFERENCE LINE. Position device template with CASE TOP REFERENCE LINE and BACKSET LINE. Spot all six (6) holes.

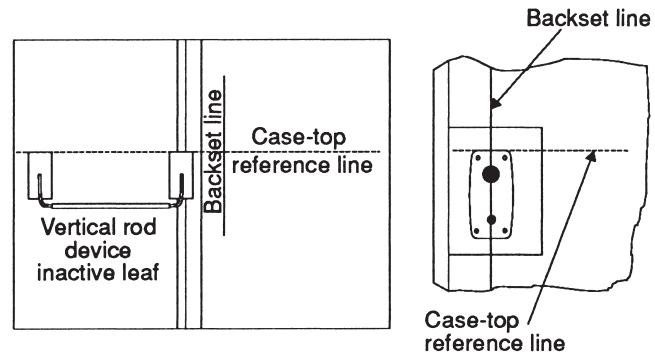

B. When Installed on Single Door


Position bolt template on backset line so that CYLINDER REFERENCE LINE is 42⁵/₈" (108 cm) above finished floor line or top of threshold. This will give 37" (94 cm) crossbar height. Spot all six (6) holes.

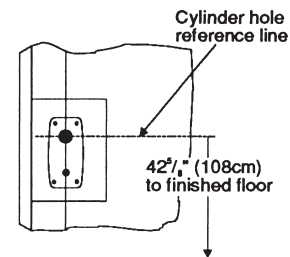

2. MARK EDGE OF DOOR


Draw horizontal line from SPINDLE CENTERLINE to edge of door. Carry line around onto opposite face of door. BE SURE LINE IS LEVEL.

Position lock template on door face, centering it on door edge and lining up SPINDLE CENTERLINE. Spot mortise area.

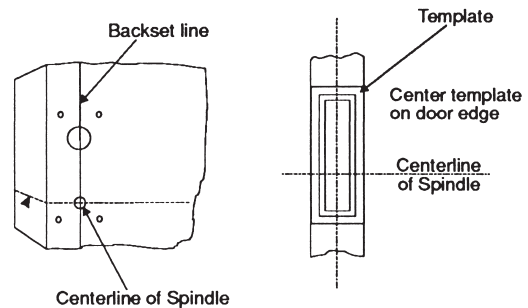

3. MARK OUTSIDE OF DOOR ONLY IF YOUR INSTALLATION HAS OUTSIDE TRIM

Cylinder hole reference line was dimensioned from finished floor. Carefully measure distance from this line to bottom of door. Transfer to outside face of door to spot cylinder hole on backset line previously drawn. Align cylinder hole of trim template with this mark. SPOT ONLY THOSE HOLES WHICH APPLY TO YOUR TRIM'S FUNCTION.

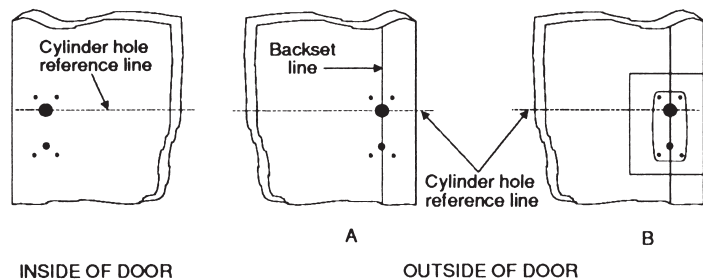

4. DRILL AND MORTISE

After carefully rechecking all measurements, mortise door for lock. Then drill holes for spindle, trim (if furnished) and active case.

5. INSTALL ACTIVE CASE, LOCK, AND TRIM


Following illustration, insert mortise lock into door and fasten with #12-24 combination screws. Insert spindle into lock hub until roll pin stops spindle travel. Engage active case with spindle and position against face of door. Align trim (if furnished) on door and fasten using #12-24 flat head machine screws or optional sex nuts and bolts. Your trim may vary from example shown here.

Screw cylinder (if required) with collar into lock. Tighten cylinder set screw gradually, while testing for proper cam engagement. Keyway should be vertical so that key is inserted with cuts facing up.

NOTE: If cylinder does not thread in smoothly, check for misalignment of cylinder holes in trim, door and lock.

Attach armored front using #8-32 flat head machine screws.

NOTE: Secure all screws with equal torque to avoid binding.

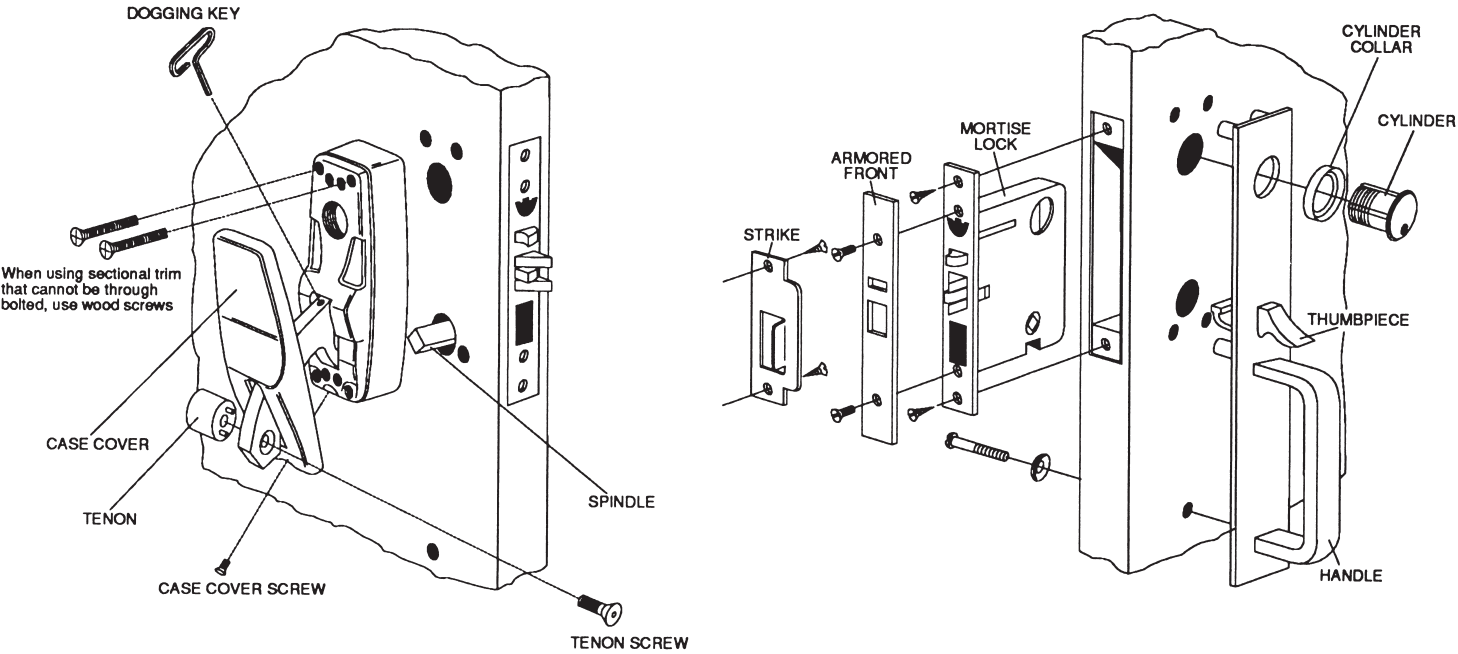

Installation Instructions

ED6600 Series
Mortise Crossbar Exit Device


6. TEST OPERATION

NOTE: Until inactive case is installed (STEP 8), you must support bolt lever for proper latch action.

7. INSTALL STRIKE


(Wood Jamb Only) Close door and mark jamb or inactive door with centerline of bolt. Mortise and install strike.

OPEN BACK STRIKES are required for inactive door of pair of doors and are handed to suit swing of door.

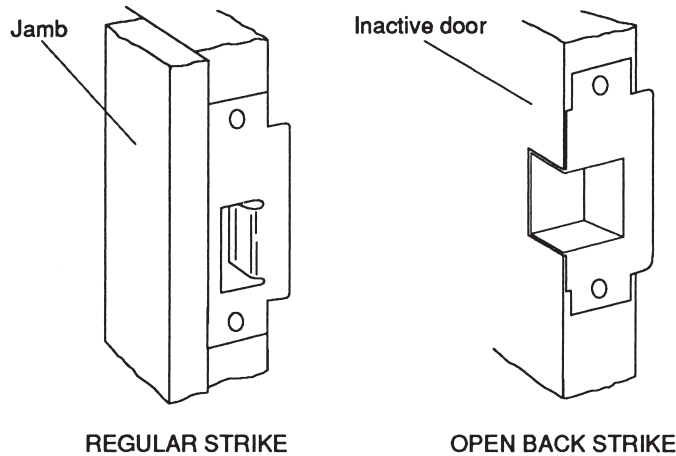


8. MOUNT INACTIVE CASE

Place case in desired position and spot four (4) screw holes using case as template. BE SURE CASES ARE LEVEL AND AT SAME HEIGHT. Drill for #12 screws and mount case. If sex nuts and bolts are used, drill 1/4" holes through door and enlarge outside to accept sex nut.

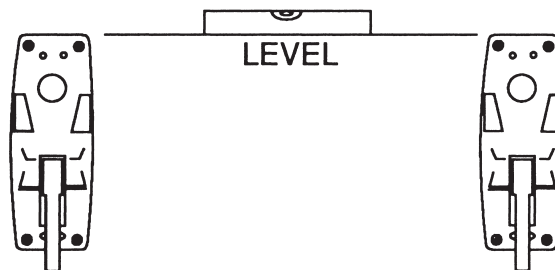

9. REPLACE ACTIVE AND INACTIVE CASE COVERS

Position top of case first, engaging pin on cover in hole in casting. Secure with phillips screws.

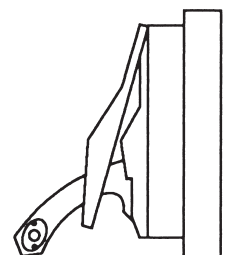


Installation Instructions

ED6600 Series
Mortise Crossbar Exit Device


10. INSTALL CROSSBAR

Measure distance between levers near hole where top of lever enters case. Add 1/4" (6mm) to this dimension and cut crossbar to this measurement. Remove burrs on inside and outside of bar.

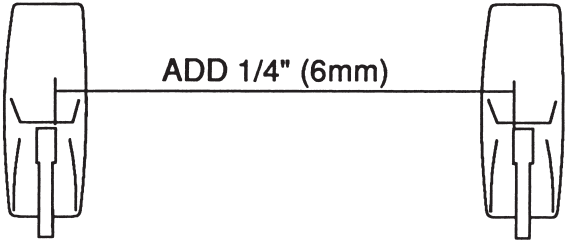


A. REPLACE TENON IN ONE (1) LEVER

Replace tenon in one lever using dogging key. DO NOT TIGHTEN.

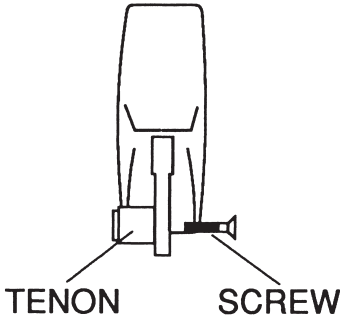


B. PLACE 2nd TENON IN CROSSBAR

Place other tenon into end of crossbar so it is just flush.




C. PLACE OTHER END OF CROSSBAR OVER TENON PREVIOUSLY SECURED TO LEVER

Set crossbar into recess in lever. If necessary, loosen screw slightly to slide crossbar over tenon.

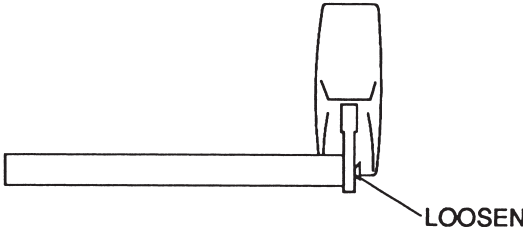

D. POSITION OTHER END OF CROSSBAR WITH TENON IN RECESS IN OTHER LEVER


Install screw. DO NOT TIGHTEN.

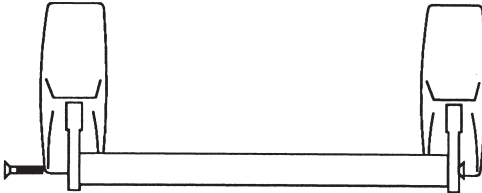

E. SEAT CROSSBAR IN LEVER

Push down lightly on right lever while pulling up lightly on left lever. Alternate procedure as required. This rocking motion will align both tenon pins in lever holes. TIGHTEN SCREWS USING SCREWDRIVER THROUGH BOW OF DOGGING KEY.



NOTE: IF TENON PINS ARE NOT SEATED IN LEVER HOLES, BAR WILL BE LOOSE AND TWISTABLE. REPEAT ROCKING PROCEDURE AS REQUIRED TO ACHIEVE PROPER SEATING.

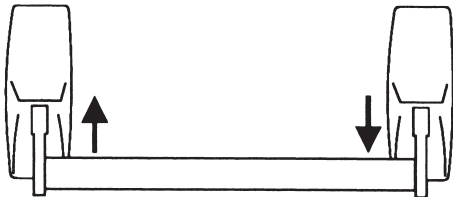

Installation Instructions

ED6600 Series
Mortise Crossbar Exit Device

TO REVERSE HAND OF DEVICE IF NECESSARY


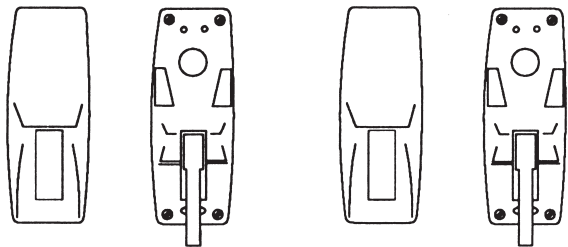
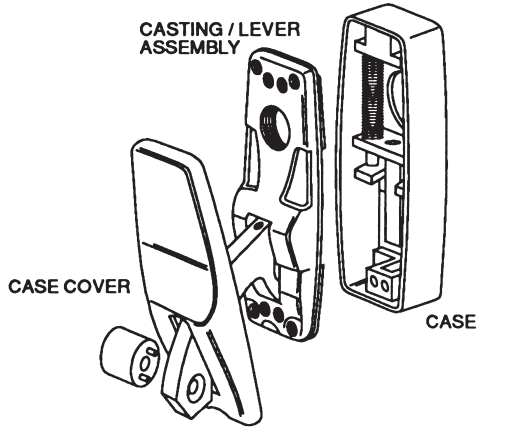


A. REMOVE CASE COVERS

Remove phillips head screw at bottom of cover and lift off cover.

CASTING / LEVER ASSEMBLY B

CASTING / LEVER ASSEMBLY A



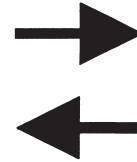
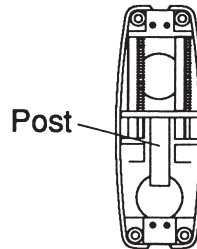


INACTIVE CASE

ACTIVE CASE

B. REMOVE CASTING / LEVER ASSEMBLIES FROM CASES

Remove four phillips head screws. Place castings on table above the cases. Switch position of cases as shown. DO NOT MOVE CASTING / LEVER ASSEMBLIES.

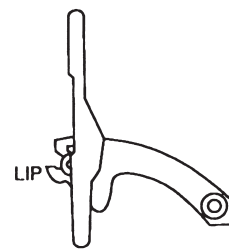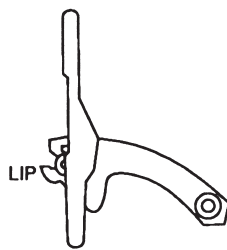

C. REPLACE CASTING / LEVER ASSEMBLIES

Place casting "A" on INACTIVE CASE, engaging lever lip under finger on bottom of slide. Position casting "B" on ACTIVE CASE so lever lip engages slide hook. SECURE WITH PHILLIPS HEAD SCREWS. DO NOT REPLACE CASE COVERS.


NOTE: Oval recess in levers should be toward center of door when complete.


Installation Instructions


ED6600 Series Mortise Crossbar Exit Device

IMPORTANT

**IF COMPENSATOR
AND HUB BECOME
DISASSEMBLED
FROM BACKPLATE,
REASSEMBLE AS
SHOWN**



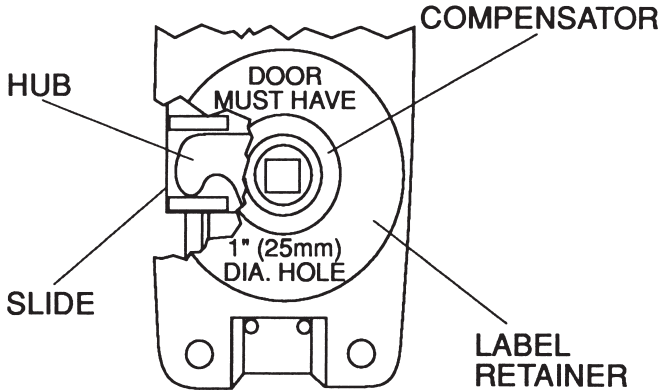

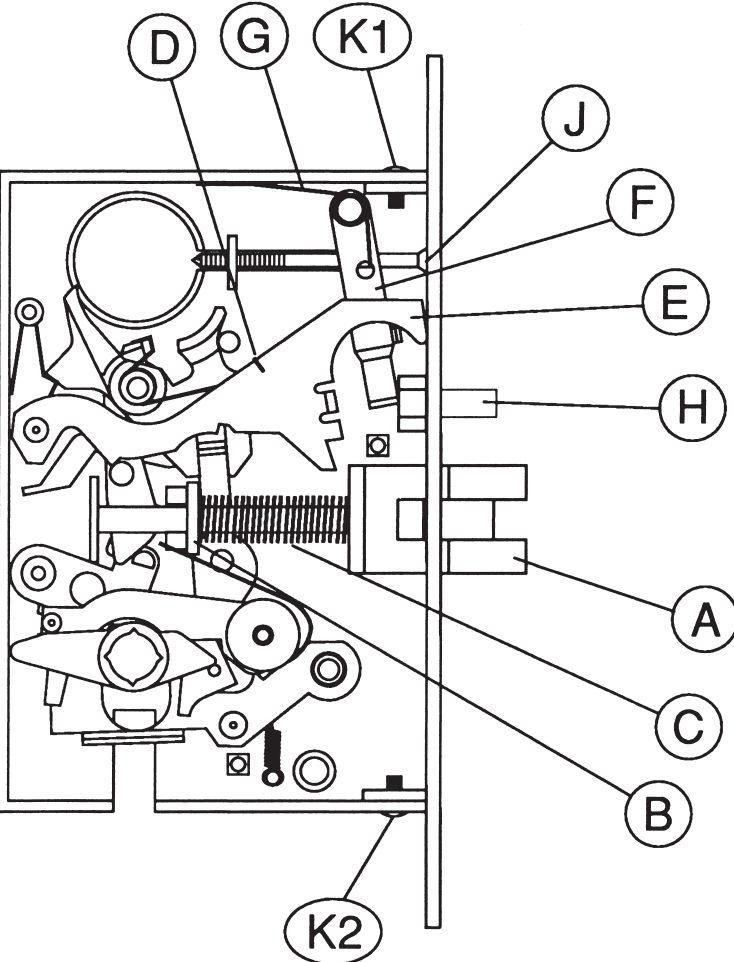

1. Remove three (3) screws and remove case cap.
2. Remove and reverse latch A. Be sure washer B remains against latch spring C when reinstalling latch A.
3. Disengage spring D of large horizontal deadlatch lever E and remove that lever.
4. Remove small vertical deadlatch lever F and spring G.
5. Reverse deadlatch H so concave surface faces same direction as bevel of main latch A.
6. Reinstall lever F and spring G. Reinstall lever E, being careful to reengage spring D.
7. Move cylinder set screw J to opposite side.
8. Replace case cap and tighten three (3) cap screws securely.
9. Reverse lock front bevel by loosening (not removing) two (2) screws K in top and bottom edges of case. Pivot front to proper bevel (or flat) and retighten screws.
10. Check for smooth latch, cylinder and knob/lever operation before installing into door.

Installation Instructions

ED6600 Series Mortise Crossbar Exit Device



ASSA ABLOY

In U.S.:
Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658

Technical Product Support:
Phone: 888-607-5703

In Canada:
ASSA ABLOY Door Security Solutions Canada
160 Four Valley Drive
Vaughan, Ontario, Canada L4K 4T9
Phone: 800-461-3007

FM378 12/18
Patents Pending Printed in USA