
Notes:

- This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
- 2. Do not scale drawing.
- 3. Dimensions are in inches (mm).
- 4. LHR door shown preparation is typical for both door hands.
- 5. For door reinforcement see template 7400-0000.
- 6. Prepare mounting holes when installing trim.
- 7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.
- 8. Dimensions given about a centerline are symmetrical.
- 9. Unspecified radii 1/8 (3) maximum.



Note: Lever design prefix does not aff ect door prep.

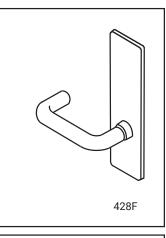