
2608 Pivot Alignment Tool Center Hung Installation Instructions

- 1. Insert end of plumb line through small hole in bottom of the body and out the side hole.
- 2. Fish enough line through so bob can center over floor portion of the pivot.
- 3. Slide body over top pivot pin and tighten thumb screw.
- 4. Adjust height of plumb bob and allow it to center.
- 5. Mark holes in floor plate for drilling.

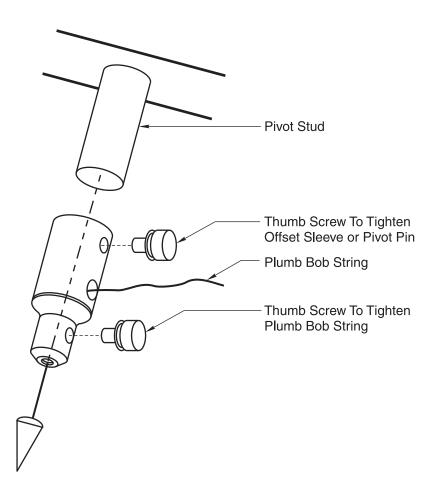

Notes:

- 1. Do not scale drawing.
- 2. Parts not sold separately.
- 3. Plumb bob and string by others.

RIXSON° ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

DATE

IS2608

06-09